



# User's Manual

K2 Smart Lock V1.0.0

1251202157292000

## Technical Parameters


The parameters might be different depending on the model you purchased, and the actual product shall prevail.

Parameter	Description
Fingerprint module	Capacitive (biotech)
Fingerprint capacity	50
Card type	Mifare 1
Card feature	Non-contact, high security, anti-copy encryption, special-purpose card
Induction distance	< 20 mm
Induction time	< 0.5 s
Card capacity	50
Keypad type	Touch key
Password length	6 digits–12 digits
Password capacity	50
Peeking-proof password	Any numbers can be added before and after the unlock password.
Working voltage	4.5V DC–6.5V DC. Four 1.5V AA alkaline batteries
Battery life	About 12 months (10 times/day)
Low power alert	< 4.8V DC
Backup power	Micro USB port
Auto locking	In case of 3 continuous wrong passwords, 5 continuous wrong cards or 8 continuous wrong fingerprints, the system will be locked for 3 minutes
Applicable door thickness range	42 mm–95 mm
Positioning dimension	60 mm edge distance and 68 mm center distance
Working temperature	-10°C to +55°C
Relative humidity	10%–93%
Restore factory defaults	Supported
System reset	Supported
Doorbell	Supported
Built-in buzzer	Supported
Built-in speaker	Supported
Chinese and English voice	Supported


## FAQ

Question	Solution
Card reading is valid, but the door cannot be opened.	There might be installation misplacement or mechanical faults. Please contact the customer service.
The key cannot be pulled out, rotated, or open the door.	• Check whether the key is returned to original position completely. • To open the door, rotate the key and then push down the handle.
There is no response to operations and the system prompts low power.	Connect the emergency power to open the door, and then replace the battery timely.
There are scratches on the touch panel of the new Smart Lock.	Remove the protective film from the panel prior to use.
The touch panel cannot be wakened up.	Your palm shall stay on the touch panel for about 1s.
The password cannot unlock the door.	• Check whether password is correct. • Check whether # is tapped at the end of operation. • Check whether the lock is in DND mode.


## Opening Door with Physical Key

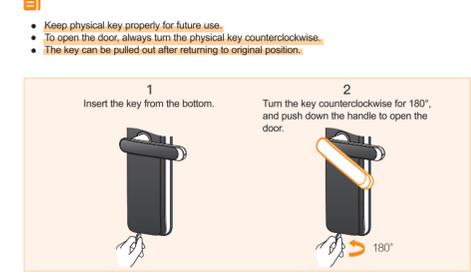

## Closing Door and Locking

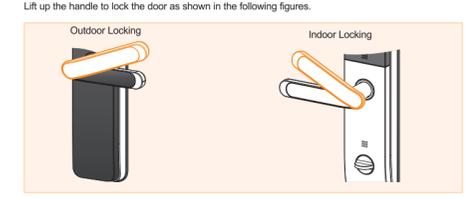


## Opening Door with Card

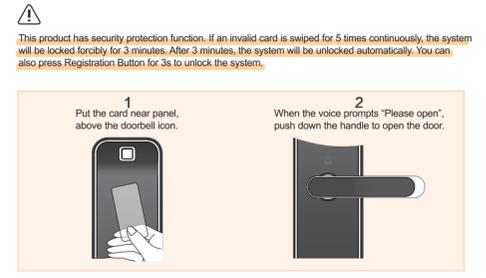

- The system prompts "Invalid" if an unregistered card is used.
- Any damaged card cannot be used. If registered card is not deleted, it is suggested that the invalid card should be cut into pieces and then discarded. Moreover, please register new card timely.

## Opening Door with Fingerprint

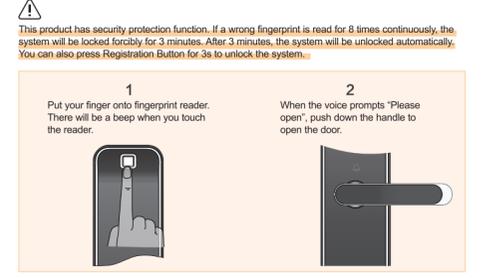

- This product has security protection function. If a wrong fingerprint is read for 8 times continuously, the system will be locked forcibly for 3 minutes. After 3 minutes, the system will be unlocked automatically. You can also press Registration Button for 3s to unlock the system.


## DND Mode



- To exit DND mode, touch to wake up the keypad, tap and hold \* for 3s, enter admin password when you hear a beep, and then tap #.
- In the DND mode, the lock can be opened with admin password or admin fingerprint. To unlock with admin password, tap \*, enter admin password, and then tap #.

## 04 Basic Operations

### Opening Door with Password

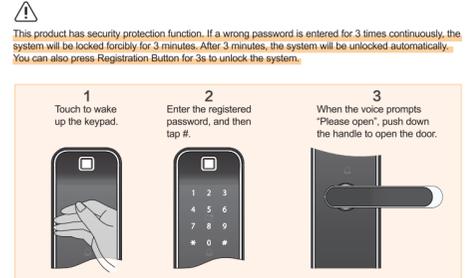


- This product has peeking-proof function. Any numbers can be entered before and after the registered password. (For example, any numbers + registered password + any numbers).


## NOTE

- If the unlock button interface is displayed, the pairing is successful. If pairing failed, the system prompts "Device is not found, please check if the door is unlocked."
- The Bluetooth disconnects automatically if the Bluetooth function is disabled on the mobile phone or the distance is beyond the Bluetooth connection range. In this case, the outer cycle of unlock button turns gray. The connection resumes if the Bluetooth function is enabled again on the mobile phone or the next time the mobile phone gets close.

## Deleting Settings

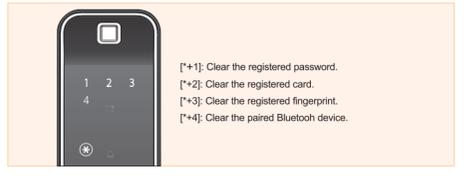


## Chinese and English Voice Prompt Settings

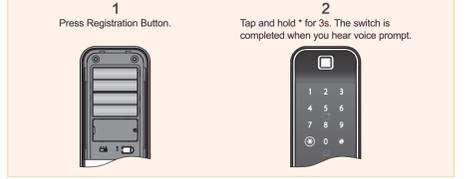

## Passage Mode

In the passage mode, lock handle is always effective. Pushing down the lock handle each time can always open the door.

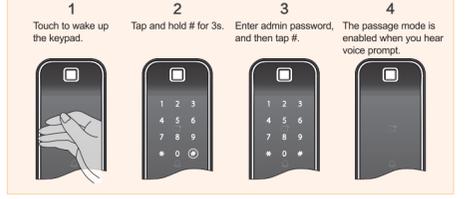



- Use admin password or admin fingerprint to enter or exit passage mode. To exit the passage mode, touch to wake up the keypad, tap and hold # for 3s, enter admin password when you hear a beep, and then tap #.

## Important Safeguards and Warnings


- This part describes the contents about proper handling, hazard prevention, and prevention of property damage. Read these contents carefully before using the product with them when using, and keep it well for future reference.
- ### Operation Requirement
- Do not disclose your password to others. Change password regularly.
  - Do not fill water into the product on purpose.
  - Replace the battery in case of low voltage.
  - When installing battery, make sure the positive and negative pole directions are the same as the indications in battery compartment. Wrong direction might cause faults such as rupture, leakage, and overheating.
  - Do not touch the keys frequently or touch the keys with the hard objects such as ball pen.
  - During cleaning, do not wipe the product with strong acid, strong alkali, corrosive organic solvents, or polishing objects, to avoid damaging the appearance.
- ### Privacy Protection Notice
- As the device user or data controller, you might collect personal data of others, such as face, fingerprints, car plate number, Email address, phone number, GPS and so on. You need to be in compliance with the local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures, including but not limited to: providing clear and visible identification to inform data subject the existence of surveillance area and providing related contact.

- ### About the Manual
- The manual is for reference only. If there is inconsistency between the manual and the actual product, the actual product shall prevail.
  - We are not liable for any loss caused by the operations that do not comply with the manual.
  - The manual would be updated according to the latest laws and regulations of related regions. For detailed information, see the paper user's manual, CD-ROM, QR code or our official website.
  - If there is inconsistency between paper user's manual and the electronic version, the electronic version shall prevail.
  - All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the manual. Please contact the customer service for the latest program and supplementary documentation.
  - There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, please refer to our final explanation.
  - Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
  - All trademarks, registered trademarks and the company names in the manual are the properties of their respective owners.
  - Please visit our website, contact the supplier or customer service if there is any problem occurred when using the device.
  - If there is any uncertainty or controversy, please refer to our final explanation.

## 01 Structure

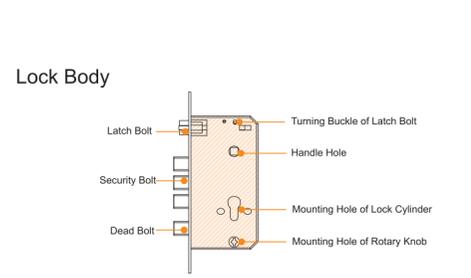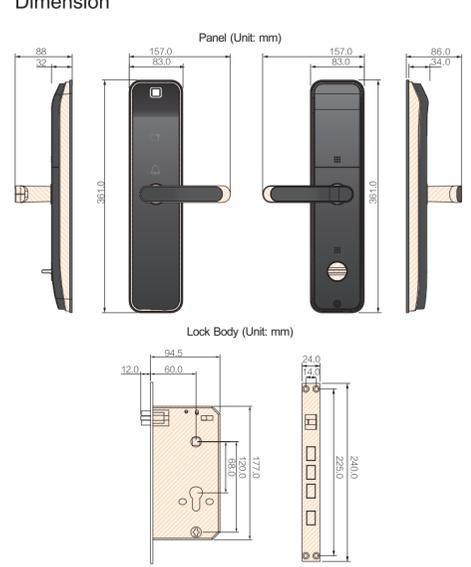

## Panel

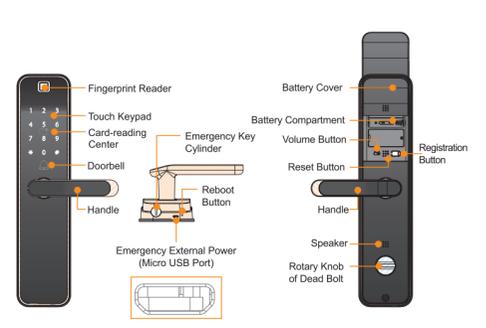

## Interface

- In the password entry status, 0–9 are entry keys.
- In the registration mode, the following numbers are function keys.
 


Number	Function
1	Password setting.
2	Card setting.
3	Fingerprint setting.
- Card-reading central position.
- In the password entry status or registration mode, # is confirmation key.
- In the non-registration mode, tap and hold # for 3s to enter the passage mode.
- In the non-registration mode, tap and hold \* for 3s to enter or exit the DND (do not disturb) mode.
- In the registration mode:
  - Tap \* to return to upper level of menu (not applicable to first-level menu).
  - Tap \* + function key to clear the registered information of this function.
- Red indicator is ON: The battery is low and needs to be replaced.

## 02 Instruction

### Battery Replacement

- When the voice prompts low power, replace the battery immediately.
- Make sure the directions of positive pole and negative pole are correct; otherwise the Smart Lock will not work.
  - Battery leakage might cause product fault. Please check battery regularly (every six months).
  - Mixed use of old and new batteries is prohibited.
  - After low power alert is prompted, the password, card, or fingerprint operations might not work normally. If you press Registration Button, the voice prompts low power and new user cannot be added.

### Emergency Power

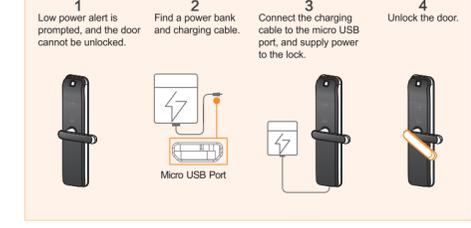


## 03 Settings

### Changing Admin Password


- The default admin password is 123456 and has unlock authority.
- The Smart Lock is in demo mode for the first installation, and you can open the door without password, fingerprint, or card.
- For your security, please change admin password; otherwise, you cannot register password, card, or other relevant information. The admin password shall not be 123456.
- The admin password is not authorized with unlock function, so it cannot be used to open the door. The door can be opened with admin password only in DND mode.
- If you forget admin password, enter registration mode with admin fingerprint, and then change it.




## Password Registration

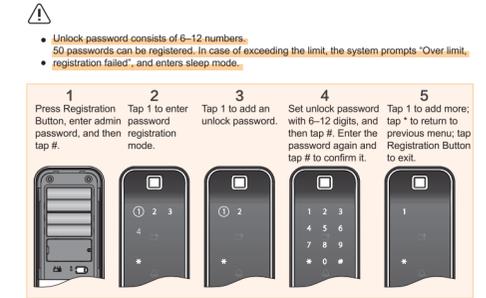

## Card Registration

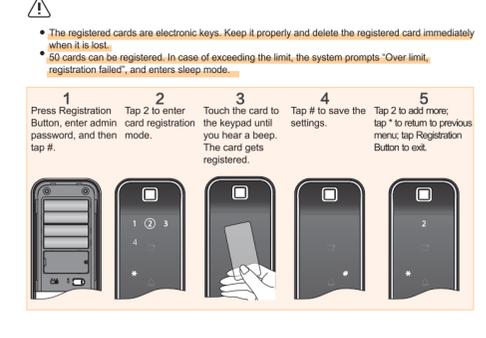

## Fingerprint Registration

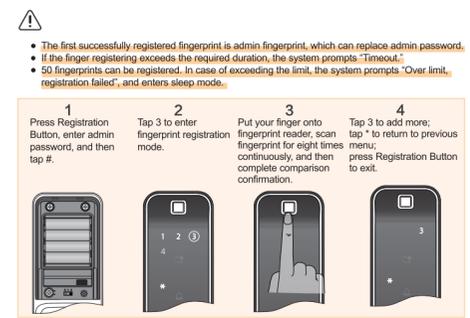

- The first successfully registered fingerprint is admin fingerprint, which can replace admin password.
- If the finger registering exceeds the required duration, the system prompts "Timeout."
- 50 fingerprints can be registered. In case of exceeding the limit, the system prompts "Over limit, registration failed", and enters sleep mode.

### Bluetooth Pairing

**CAUTION**

- This function is only supported by Bluetooth series.
- Before setting Bluetooth function, please scan the QR code to download and install Smart Lock app.

Maximum 8 mobile clients can be paired to operate the functions such as unlocking, sharing temporary password, and querying unlocking records.

